



RESOURCE GUIDE





Index

2-3	Cattle Tags (2 Piece Tags)	20-21	Handheld EID Readers
4-7	Swine and Multi-Species Tags	22-23	Managing EID Data
8	Sheep Mini Tags	24-25	Tissue Sampling Technology
9	A-Tag™ Cow & Calf (1 Piece Tags)	26	TSU Matched Sets
10	Official Tags	27	Tag Marking Pens
11	Custom ID	28-29	Allflex
12	A-Tag™ Feedlot V2	30-40	Syringes
13	Advantage Feedlot Tags	41	Tag Placement
14	Electronic ID	43	Tag Lookup Guide
15	Matched Sets		
16-17	Applicators & Accessories		
18-19	Destron Fearing		

Get The Allflex Advantage

Allflex has more experience in livestock identification than any other manufacturer and we're committed to helping people with high quality products needed in the livestock industry. For products that exceed industry standards for performance, you can rely on Allflex. As an Allflex customer, you'll benefit from a proven track record for innovation and products designed for your needs.

Innovation: From pioneering electronic identification systems and creating the first custom, laser ink, marked visual identification tag, to leading the industry in tamperproof tags, and Tissue Sampling Units, we're dedicated to finding new and better products for the market we serve.

New Products: We consistently introduce new and improved products based on sound manufacturing and an understanding of how those products need to perform in real-world conditions.

Service: Count on professional field sales, customer service and technical staff who will help identify the right solution for specific operations and share best practices to achieve the maximum in product performance. You can count on reliable supply and delivery ... which means producers will have the tags and equipment when they need it.

For questions about these products or how to get started, contact Allflex at 1-800-989-TAGS (8247) or visit allflexusa.com

**Tagging Today.
Tagging Tomorrow.**




Global Tags for Cattle

Allflex Global Tags are packaged standard in sets of 25 – blank or numbered sequentially. Other tag combinations are available upon request.

Black tags available in Super Maxi, Maxi and Large Female only. Black tags are laser marked with white characters.

Classic Purple available in Maxi and Large Female only.

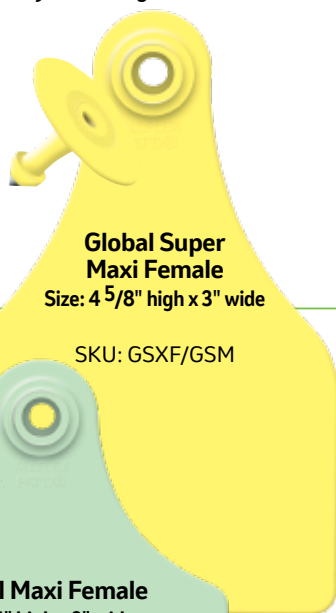

**Global Super
Maxi Female**

Size: 4 5/8" high x 3" wide


SKU: GSXF/GSM

Global Super Maxi Female

- Used primarily for mature cattle
- Laser-ink management number standard
- Largest panel for management information
- Highly visible from both front and back
- Especially useful in cold climates for animals with longer hair
- Packaged with Global Small Male

Global Maxi Female

- Our most popular size for both mature cattle and calves
- Laser-ink management number standard
- Excellent for beef and dairy cattle
- Packaged with Global Small Male

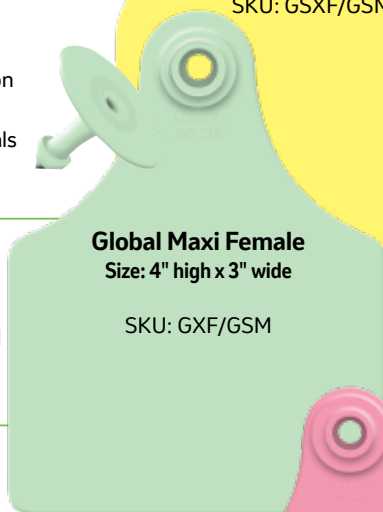


Global Maxi Female

Size: 4" high x 3" wide

SKU: GXF/GSM

Global Large Female

- Used primarily for calves
- Laser-ink management number standard
- For use in beef and dairy cattle
- Packaged with Global Small Male

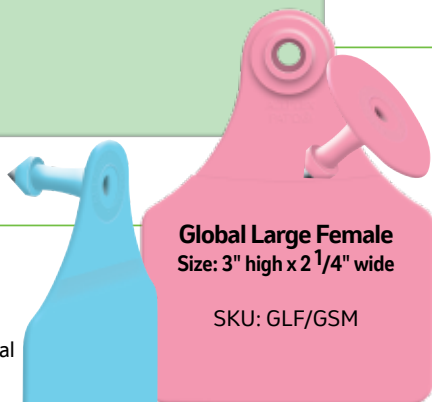

Global Large Female

Size: 3" high x 2 1/4" wide

SKU: GLF/GSM

Global Large Male

- Best used for beef and dairy cattle
- Provides visibility from behind an animal
- Can be used in combination with any Allflex Global Female tag
- Packaged without female tags (quantities of 25)



Global Large Male

Size: 2 3/4" high x 2 1/4" wide

SKU: GLM

Tamperproof Tags for Cattle

Patented Allflex Tamperproof ear tags offer the foremost security in livestock identification and management.



Tamperproof Maxi Female (Ultra Cap™)

Size: 4" high x 3" wide

SKU: GTXF/GSM

Tamperproof Large Female (Ultra Cap™)

Size: 3" high x 2 1/4" wide

SKU: GTLF/GSM



- Tamperproof tags are ideal for Official Registration and Certification Programs, as well as Official ID Markets
- Allflex Tamperproof Female tags feature either the exclusive Ultra Cap™ or the Rotaclick™ design
- Can be used in combination with any Allflex male tag
- Packaged standard with Global Small Male



Tamper-evident Small Female (Rotaclick™)

Size: 1 3/16" diameter

SKU: GSTF


Allflex's Exclusive Ultra Cap™

Tamperproof Maxi Female and Tamperproof Large Female




1

On entry into female, the male tip forces the exclusive Ultra Cap™ to spring open inside.

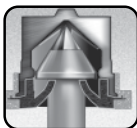

2

When tip has fully entered, Ultra Cap™ snaps back to lock tag solidly in place.

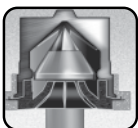

3

Ultra Cap's™ hard ridge and female's molded ridge doubly secure tag. Ultra Cap™ allows female to turn on male stem to help prevent snagging.

Allflex's Exclusive Rotaclick™

Tamperproof Small Female




1

On entry into female, the male tip forces the exclusive Rotaclick™ to spring open inside.



2


When tip has fully entered, Rotaclick™ snaps back to lock tag solidly in place.

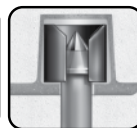

3


Rotaclick's™ hard ridge and female's molded ridge doubly secure tag. Rotaclick™ allows female to turn on male stem to help prevent snagging.

Identification for Swine

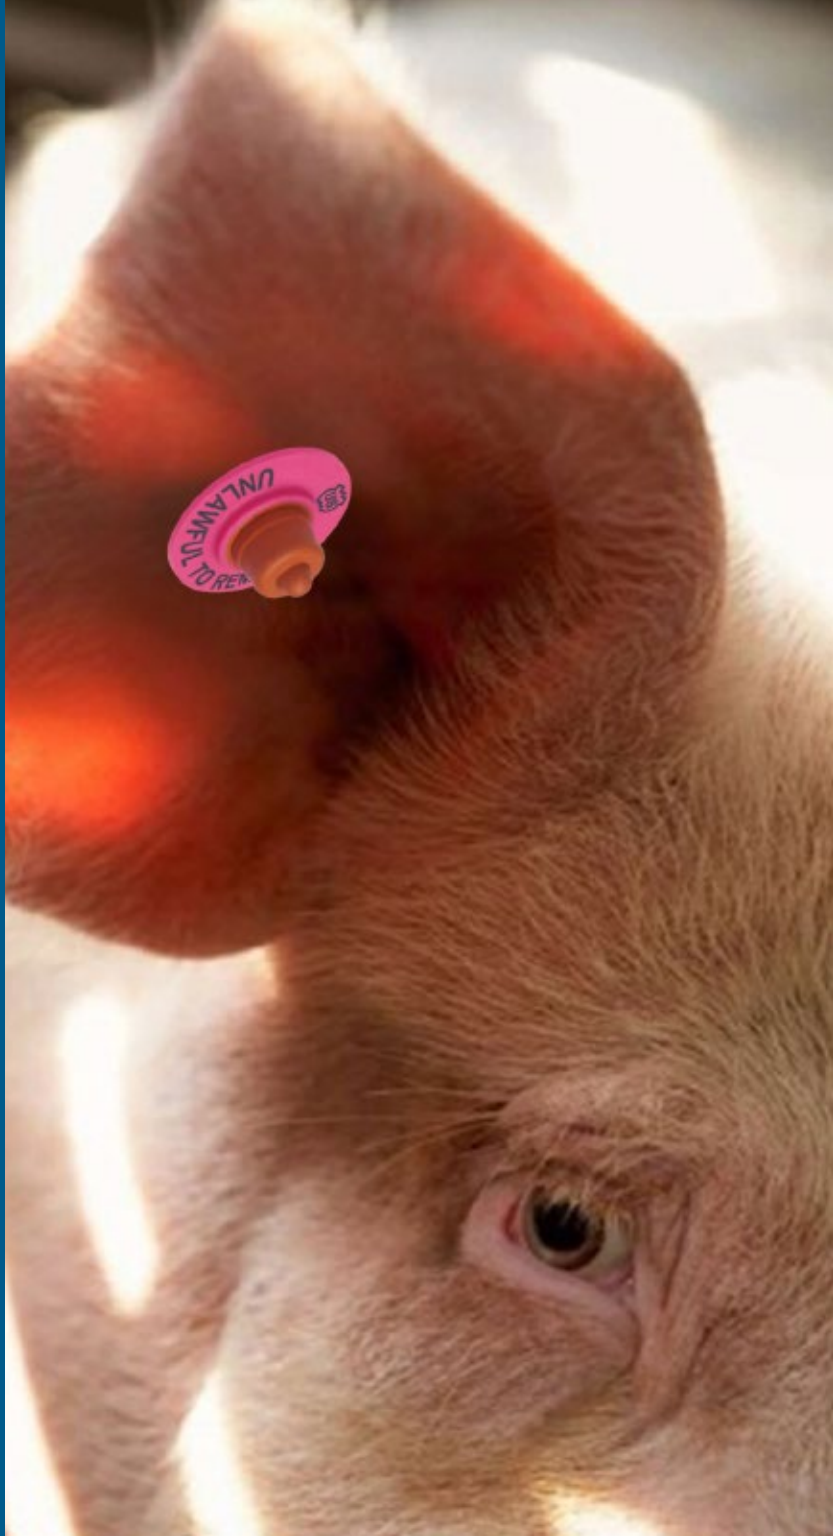

Identification for Swine

Integra, and Hog Male Tag Colors




Integra™ Hog Male

- Large panel holds more management information
- Longer male stem allows for higher tag placement in ear
- Lays flat to resist snagging and chewing
- Laser-ink available on management numbers larger than 1/2"
- Used in combination with Global Small Female and Tamperproof™ Small Female tags



Global Hog Male

- Longer male stem allows for higher tag placement in ear
- Lays flat to resist snagging and chewing
- Laser-ink available on management numbers larger than 1/2"
- Used in combination with Global Small Female and Tamperproof™ Small Female tags

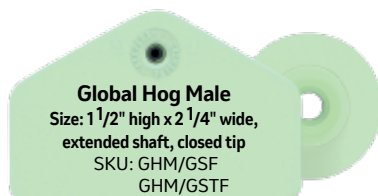


Official USDA Swine Premises Tags

- Tags must be applied prior to harvest channel entry
- Tags must have premises ID number and shield
- Cull sows and boars required to have PIN tag
- PIN of last farm required
- Additional colors now available

Size: 1 5/8" high x 2 1/4" wide,
extended shaft, closed tip
SKU: USDA-GIHM1/GSTF-COLOR




Official USDA Swine Premises Tags



Global Tags for Multi-Species



Global Tags for Multi-Species

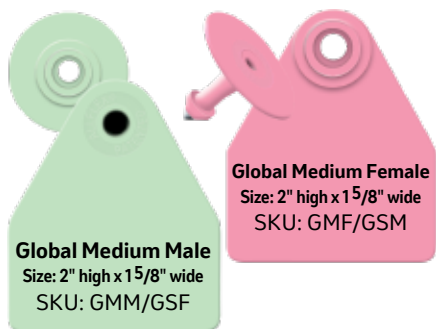

Global Medium Male
Size: 2" high x 1 5/8" wide
SKU: GMM/GSF

Global Medium Female
Size: 2" high x 1 5/8" wide
SKU: GMF/GSM

Global Medium Female

- Used for calves, hogs, goats and sheep
- Laser-ink available on management numbers larger than 1/2"
- Packaged standard with Global Small Male

Global Medium Male

- Packaged standard with Global Small Female
- Laser-ink available on management numbers larger than 1/2"
- Also available blank in packages of 25 without female companion



Global Small Male

Size: 1 3/16" diameter

SKU: GSM (Shaft length 22.3mm, Tip Color: Black)

GESM (Shaft Length: 25.3mm, Tip Color: Silver)

Global Small Male

LASER MARKING ONLY

- Engineered for superior retention
- Numbered Global Small Male packaged standard with blank Global Small Female
- Also available with extended shaft for thicker ears
- Available blank in packages of 25 without female companion
- GESM only available in Yellow, White, Orange, Green, and Blue



Global Small Female & Tamperproof Small Female tags

Size: 1 3/16" diameter

SKU: GSF & GTSF

Global Small Female & Tamperproof Small Female tags

LASER MARKING ONLY

- Blank Global Small Female or Tamperproof Small Female packaged standard with Global Small Male, Medium Male, Hog Male, Integra Hog Male and Piglet tags
- Also available blank in packages of 25 without male companion





Sheep Mini

Sheep Mini & Sheep Mini Plus

LASER MARKING ONLY

- Light weight and flexible enough for the smallest goat kids and lambs
- Easy to apply, utilizes Allflex Universal Total Tagger
- Durable laser mark
- Used In Official Livestock Programs including the USDA Scrapie Eradication Program
- Packaged in bags of 25
- Sold as a set, not available for order separately

Tag Colors:

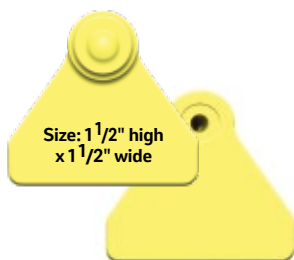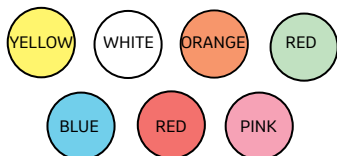

Size: 1 1/2" high
x 1 1/2" wide


SKU: SMF/SMM



Size: 1 3/4" high
x 1 1/2" wide

SKU: SMFPLUS/SMMPLUS

Tag Application for Two-Piece Tags

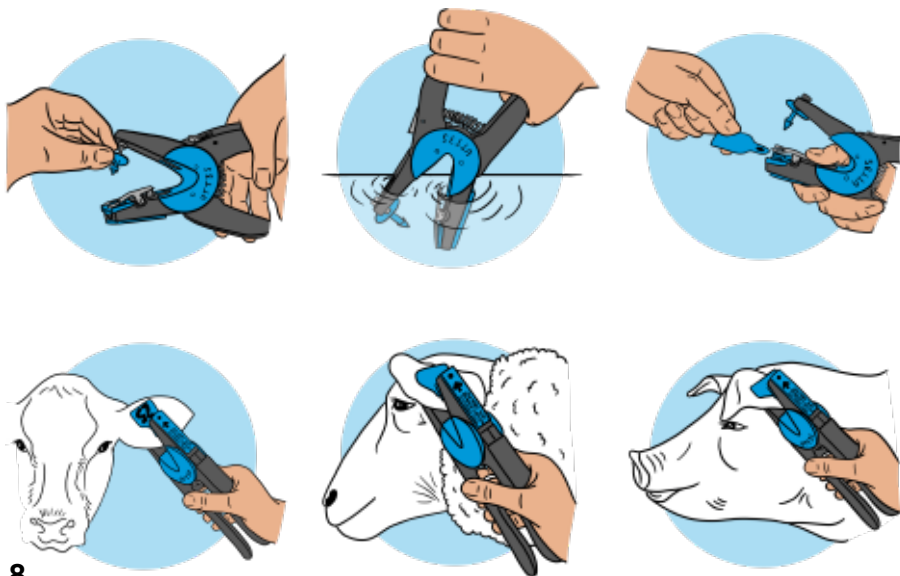


A-Tag™ One-Piece Tag

A-Tag™ One-Piece Tag

- Newly redesigned for easy use with cows, calves or stocker cattle
- Two convenient sizes
- Patented laser-ink permanent marking
- Custom marking and numbering available by special order
- Easy one-piece application
- Black A-Tags are laser marked with white characters

One-Piece Self-Piercing Tip

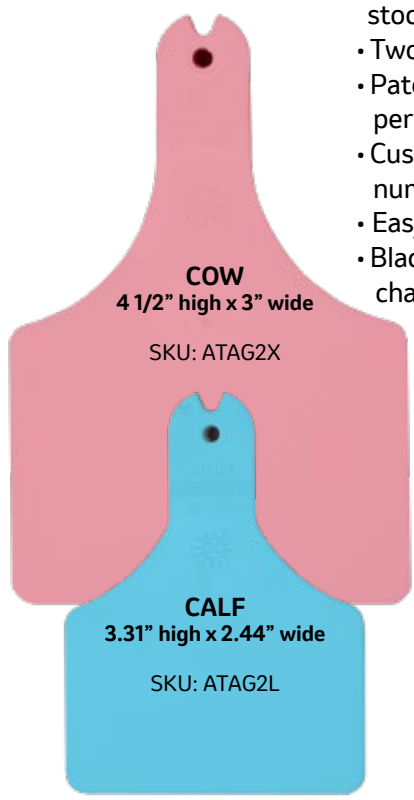

Cow/Calf Tag Colors:



A-Tag™ V2 One-Piece Applicator

- To be used exclusively with A-Tags™



Telling Them Apart - It's easy to distinguish the notched end of the A-Tag V2 from round end of the A-Tag V1



Newly designed pinhole on the back of the A-Tag V2 self-piercing tip allows for quick insert application method

Official Tags

Animal Disease Traceability System AIN Tags

The ADT program is a cooperative Federal-State-Industry Program, providing a standardized information system for Federal and State animal-health authorities to use in responding to animal-disease events in the United States. These tags all start with the numbers 840 which is the global standard for US origin animals. Individual EID tags or tag sets can include coding protocol.

In order to obtain AIN tags, producers must first register their premises and obtain a premises identification number (PIN) from their state animal health authority. A database record of specific AIN tags distributed to each premises is maintained, so producers should not share or make their AIN tags available to other producers.

Producers may apply the AIN tags at their convenience and at the time most suitable to their operation, but before an animal leaves their premises.



Large FDX

SKU: USDA-FDX840/GTLF1-GSM-COLOR



Maxi HDX

SKU: USDA-HDX840/GTXF1-GSM-COLOR



ATag™ Cow HDX

SKU: HDX-840/ATAGX-COLOR-SET16

Premise Number or LID is required to purchase 840 tags, these can be obtained from your State Department of Ag.

Custom Identification

Allflex Custom ID is the Producer's Choice

Allflex Custom ID tags work harder for you. A tool kit of sizes, colors, and types serve the unique ways you sort, manage and market your cattle. Customize tags with an ID system in crisp, clean, permanent laser-ink marking. And place a proud brand on your tags to make a mark for your legacy.



- Allflex offers permanent, customizable markings on premium quality 2-Piece Global, Tamperproof and A-Tag™ One-Piece tags with Laser and Laser-Ink Marking
- There are multiple customization options available giving you the flexibility to create something as simple or complex as you need
- Tag colors and marking options will vary depending on tag selection

Customize Your Information

- Producers can use a variety of information fields available on different tags to truly customize their identification
- Use identification to measure what matters on your livestock operation
- Custom ID tags can include:
 - Brands and other images
 - Combinations of letters and numbers including farm or ranch name and location
 - Reverse side markings on the back of the tag
 - Custom numbering that's tailored to your management program
 - Birth dates and years
 - Sire and dam information

Premium Black Tags

- Allflex Producer's Choice Custom ID includes premium black ear tags in three Global Tag sizes: Super Maxi Female, Maxi Female and Large Female
- The premium black tags feature permanent white Allflex laser marking
- Black Allflex Global Small Male Tags are available blank as a matching companion or to contrast with other Allflex Global Tag colors

Visit allflexusa.com to find an online distributor

A-Tag™ Feedlot V2

A-Tag Feedlot V2 Tag Colors



A-Tag Feedlot Tag V2

- Self-piercing, pinhole tip means faster healing, reducing animal stress
- Easy one-piece application
- Small incision results in quicker healing
- Apply with Allflex A-Tag V2 One-Piece Applicator

*Redesigned
Self-piercing Tip
and Oval Stem*



*New quick-insert
application method*



A-Tag V2 One-Piece Applicator

- For use with A-Tag Feedlot V2
- Deep jaw makes proper placement easier
- Grip is designed to ease hand fatigue from repeated use
- Replacement applicator pin located in handle
- Accommodates new quick-insert application method



SKU: APP-ATAG-V2

Advantage Feedlot Tags

Advantage and Maxi Advantage Feedlot Tag Colors



Advantage Feedlot Tag

Size: 4 ³/₄" high x 2 ³/₄" wide

SKU: AF

Advantage Feedlot

- Unique shape with more panel space for marking
- Engineered neck and shoulder to reduce twisting
- Advanced pliable material for longevity and easy stamping
- Custom marking and on-site hot stamping options
- Fast application with the Allflex Easy Applicator Knife

Maxi Advantage Feedlot

- Unique shape with extra large panel space for marking
- Engineered neck and shoulder to reduce twisting
- Advanced pliable material for longevity and easy stamping
- Custom marking and on-site hot stamping options
- Fast application with the Allflex Easy Applicator Knife

Allflex Tag Knife

- To be used exclusively with the Advantage and Maxi Advantage Feedlot Tags
- Grip design allows for speedy tag application
- Stainless steel heat treated blade



Maxi Advantage Feedlot Tag

Size: 5 ¹/₂" high x 2 ³/₄" wide

SKU: MAF



Allflex Easy Applicator Knife

SKU: APP-FL-KNIFE

Electronic Identification (EID)



**HDX Ultra EID Tag,
Extended Small Male**

SKU: TFI-HDXOTP982-W/GESMW

High Performance Half Duplex HDX Ultra EID Tag

- HDX technology optimizes signal transmission and provides greatest possible read distance
- Tamperproof Ultra Cap™ provides ultimate security and retention
- ISO Compliant
- HDX Tag weight: 8 grams
- Packaged in quantities of 10, 20, 25, 50, 250 and 1000



**FDX Ultra EID Tag,
Extended Small Male**

SKU: TFP-FDXOTP982-Y/GESMY

Standard Performance Full Duplex FDX EID Tag

- FDX technology
- Tamperproof Ultra Cap™ provides ultimate security and retention
- ISO Compliant
- FDX Tag weight: 9 grams
- Packaged in quantities of 20, 25, 50, 250 and 1000



Lightweight FDX EID

SKU: TF-FDXOTP982LW -Y/GESMY

Standard Performance Full Duplex FDX Lightweight EID Tag

- FDX technology
- ISO compliant
- FDX Lightweight tag weight: 4 grams
- Packaged in quantities of 20, 50 and 250



B80

SKU: B80-FDXOTP982-Y/GESM-Y-20

Standard Performance Full Duplex FDX B80 EID Tag

- FDX technology
- ISO compliant
- FDX Lightweight tag weight: 3.5 grams
- Packaged in quantities of 20
- Non-Tamperproof



**HDX Reusable EID Tag,
Extended Small Male**

SKU: SFI-HDXOTP982-Y/GESMY

HDX Reusable High Performance EID Tag

- HDX Technology
- ISO Compliant
- HDX Reusable Tag weight: 8 grams
- Packaged in 20, 25, 250 & 1,000



**FDX Reusable Standard
Performance EID Tag,
Extended Small Male**

SKU: RFP-FDXOTP982-Y/GESMY

FDX Reusable High Performance EID Tag

- FDX Technology
- ISO Compliant
- FDX Reusable Tag weight: 9 grams
- Packaged in 20, 25, 250 & 1,000

EID Visual Matched Sets

- Sets are available in combinations of HDX or FDX EID tags paired with Maxi or Large Visual tags (other visual tag combinations available)
- All tags have corresponding Laser-Ink printed numbering
- Both tags feature the Tamperproof Ultra Cap™
- Tamperproof Maxi Tag size: 4" high x 3" wide
- Tamperproof Large Tag size: 3" high x 2 1/4" wide



HDX-Maxi Matched Set 28

SKU: HDXOTP982/GTXF-COLOR-SET28



FDX-Maxi Matched Set 18

SKU: FDXOTP982/GTXF-COLOR-SET18



HDX-Maxi Matched Set 17

SKU: HDXOTP982/GTXF-COLOR-SET17



HDX-Large Matched Set 3


SKU: HDXOTP982/GTLF-COLOR-SET3



Tag Applicators and Accessories

UTT3S

SKU: UTT3S

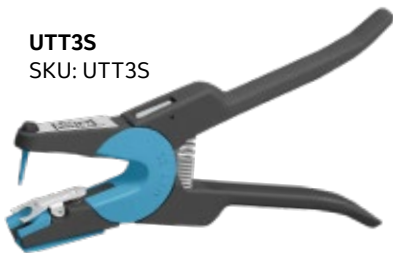

UTT3S Total Tagger

- Completely re-engineered applicator for modern tagging systems and farm labor today
- Requires much less force to squeeze so you can safely tag animal after animal with less fatigue
- Lightweight and robust with one pin for nearly all applications, including Allflex two-piece tags, electronic tags and monitoring tags




SKU: PIN-UNIV

Silver Universal Pin and Nut

- Compatible with UTT3S, UTT, Global and EID Retract-O-Matic™ Taggers
- Use to apply Allflex Global, Tamperproof and EID Tags
- Replaces red and blue pins

A-Tag™ One-Piece Applicators

- For use with A-Tag One-Piece Tags (Cow, Calf, and Feedlot V1 and V2)
- Deep jaw makes proper placement easier
- Grip is designed to ease hand fatigue from repeated use
- Replacement applicator pin located in handle

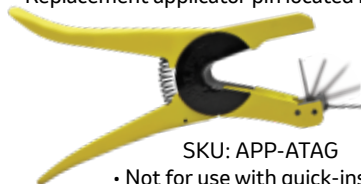

SKU: APP-ATAG

- Not for use with quick-insert application method on the A-Tag Feedlot V2



SKU: APP-ATAG-V2

- For use with A-Tag Feedlot V2
- Accommodates new quick-insert application method for A-Tag Feedlot V2



Allflex One-Piece Applicator Pin

SKU: PIN-ATAG

A-Tag™ One-Piece Applicator Pin (Black Smooth)

- For use in the A-Tag™ One-Piece Applicator
- Use to apply A-Tag™ One-Piece Tag



Tag Applicators and Accessories



Global Retract-O-Matic™
SKU: APP-RET-GLOBAL

Global Retract-O-Matic™

- Retracts the pin out of the ear before the animal can react
- Automatic applicator
- Contoured pistol grip handle
- Excellent for tagging calves, sheep and goats
- Packaged complete with loaded red blunt pin and replacement pin
- Anvil can be positioned at any angle



EID Ultra Retract-O-Matic™
SKU: APP-RET-ULTRA

EID Ultra Retract-O-Matic™

- Applies High Performance (HDX) and Standard Performance (FDX) EID tags
- Retracts the pin out of the ear before the animal can react
- Contoured pistol grip handle
- Anvil can be positioned at any angle
- Uses red blunt pin
- Automatic applicator

Ultra Replacement Kit
SKU: EID-ANVIL-KIT
Ultra Anvil
SKU: APP-RET-HANV



Ultra Retract-O-Matic™ Replacement Parts

Kit Includes:

- Shaft
- Base
- 2 Springs
- Nut & Pin



Allflex Safety Ear Tag Removal Tool
SKU: KNIFE

Allflex Safety Ear Tag Removal Tool

- Hook blade design slips easily between base of male tag and animal's ear
- Safety hook design makes tool safe for both livestock producer and animal



SKU: PIN-RET-DF

Destron Fearing ROM Pin

With the new specialty DF ROM Pin (Anodized Yellow), Destron Fearing tag customers can utilize the Allflex™ Retract-O-Matic™, as well as the UTT3S, for applying both Destron Visual and Electronic (EID) tags. The Allflex ROMs, and UTT3S, will ship with the standard Allflex Pin. The DF ROM Pin is an accessory item that should be ordered separately to replace the standard Pin.

Destron Fearing Products

Swine Identification Tags



Hog Max®

2 1/8" x 1 1/2"

Product Code: HMSET




Hog Max²®

2 1/8" x 1 1/2"

Product Code: HM2SET

- Hog Max is the industry leader for breeding age swine
- Center post stud design maximizes rate of retention
- Longer tapered tip for superior piercing ability
- Rectangular panel enhances readability and printing options for complex barcodes and logos
- Can accommodate multiple lines of custom printing and designs including barcodes and logos
- Hog Max² combines all the attributes of the Hog Max along with the addition of a square female

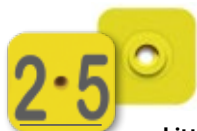

Litter Max²™

1 1/4" x 1 1/4"

Product Code: LM2SET



Litter Max™

1 1/4" x 1 1/4"

Product Code: LMSET

- Litter Max²™ is the industry leader for use in genetic management programs
- Designed specifically for piglets from birth to approximately 40 lbs
- Non-metal tip
- Square male and female design provide maximum retention from birth to harvest
- Square panel enhances readability and printing options for complex barcodes and logos
- Litter Max utilizes the same square male but will only have a round female



Standard Round

1 1/8" Diameter

Product Code: RHGSET

- Standard Round stud is most commonly used with feeder age pigs
- Universal size is designed for use in swine of any age
- Metal tip
- Round shape and fast taper tip provide superior piercing ability

Available Colors and Codes

Black = 08

Available in Standard Round only.



Destron Fearing Products

Official USDA Swine Premises Tags



SKU: SWPTSET**06D (Numbered Premises Tags)

SKU: SWPTSET**06L (Blank Premises Tags)

** = Color Code

AVAILABLE COLORS



Purposes

- Meets USDA and Pork Industry Standards
- Improves Traceback Accuracy, Speed & Efficiency
- Supports Comprehensive Disease Surveillance Programs

Implementation

- Tags Must Have Premises ID, Shield, and State
- PIN of Last Farm Required
- Tags Must be Applied Prior to Harvest Channel Entry
- Cull Sows & Boars Required to have PIN Tag

Electronic ID



SW50 - FDX Technology

Size: 1" Diameter

*Designed for pigs (Wean-to-Finish age)

SKU: SW50SET

OMN: SW50BTN02L = RFID female only - Yellow

OMN: SW50SET22 = SW50 RFID and Round Hog Male - Yellow

OMN: HMSW50SET22 = SW50 RFID and Hog Max Male - Yellow

Tag Accessories



Leg Bands

SKU: AC7003**



Super Mark Pen™

SKU: AC7001



E-Z Knife™

SKU: AC7004



ProGriplII™ Applicator

SKU: AC7066

** = Leg Band Colors:

01 = Orange, 02 = Yellow, 05 = Red,

06 = Blue, 07 = Green, 14 = Neon Orange,

15 = Neon Yellow, 16 = Neon Green, 17 = Neon Pink

ProGriplII™ replacement pin: SKU: AC7008

Handheld Readers

AWR300 Stick Reader

The AWR300 is the next generation EID Stick Reader and features 8GB of memory with a large backlit display.

The AWR300 boasts an ingress protection rating of IP67. It is lightweight, well balanced and comfortable in the hand.



**AWR300
STICK READER**
SKU: AWR300

Key Features Include:

- Long read range (30cm or 12")
- Outstanding battery life, even at top power consumption, in continuous read mode, the Li-Ion Battery will last for around 12 hours
- 8GB Memory for up to 1 million records
Record tag numbers with time stamp data and additional information
- The database function can display several items of data at once and add new information for an individual animal from defined lists including breeds or medicines
- Activities announced by multiple LED lights, plus a choice of sounds and vibration, to ensure you never miss an action
- Large backlit color display to clearly read IDs at scanning, even in dim light
- Lightweight, well-balanced with a robust construction and weatherproof IP67 standard
- Built in real time clock, displays Date and Time
- Connect to external devices using either WLAN, USB or Bluetooth connection



**RUGGED HARD-SIDED
PLASTIC CASE**
SKU: ATB300 (Case Only)
Accessory Case Sold Separately

Replacement Battery
SKU: ARB300



12V Wall Charger
SKU: APS300



USB Charging Cable
SKU: APC300



Car Charger
SKU: ACC300



Handheld Readers

APR Series

Allflex APR Series devices are compact and easy to use rugged portable RFID scanning devices for reading livestock electronic identification (EID) tags. Providing full reader functionality, extensive EID read storage, and advanced management capabilities, these readers deliver exceptional functionality and value.

APR Series Key Features Include

- **Advanced Management**

Support for individual animal management, with a large memory capacity of 1 million records. Data upload and download is easy, and data can be exported to management software or your preferred spreadsheet.

- **Superior Connectivity**

Unique WLAN connectivity (650 and 600 only), as well as Bluetooth and USB interfaces included as standard. Magnetic plug makes USB connection for transmission and battery charging simple and quick.

- **Easy and Reliable**

Fully integrated ISO11784/11875 RFID readers that are small, lightweight, and ergonomic. IP67 Casing for durability.



APR650

- Powerful barcode engine
 - Both 1D and 2D barcodes
- Fast and reliable reading of EID tags and related barcodes, such as Tissue Sample Units
- SKU: APR650



APR600

SKU: APR600




APR250

SKU: APR250




Managing EID Data

The Allflex EID Tag is a crucial part of an electronic identification system. As such, the tag is simply the first of four elements needed for complete data collection and management. Data collection systems are varied and constantly evolving. They typically include:

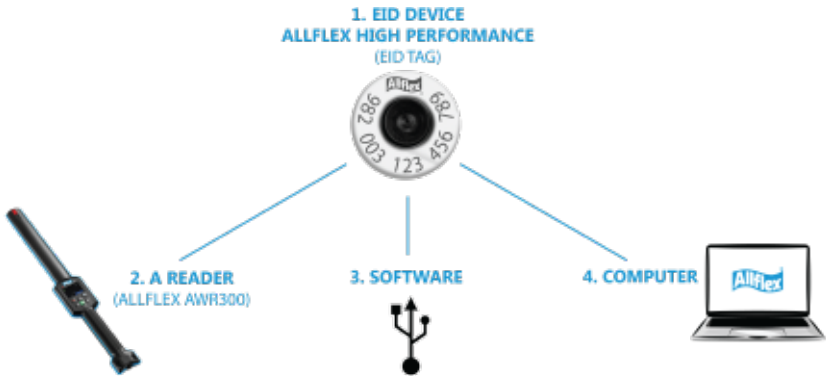

EID Tag Manager software can be downloaded for FREE from our website at allflexusa.com

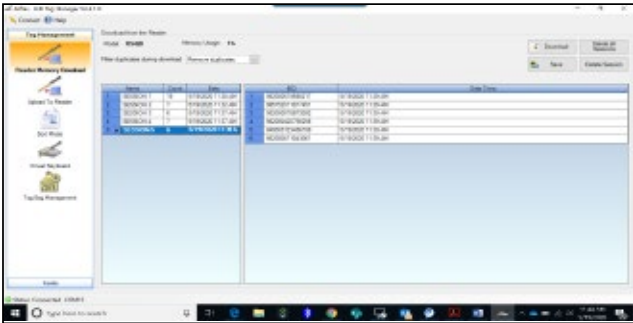

Allflex EID Tag Manager Software allows the Allflex Reader user to manage basic reader functions and download EID tags

- To manage an Allflex Reader connected to a PC thru serial ports, USB to Serial or Bluetooth connection
- To download tag data stored in an Allflex Reader and save the file in Excel or Word documents
- To use EID tag manager as a wedge program to scan EID numbers directly into Excel, Word or other application
- To reduce data entry when associating EID numbers with management numbers by using web link to download EID tag numbers



Streamline Livestock Information Collection With Allflex® CONNECT



Free smartphone app links your EID reader to the office

Allflex CONNECT makes it easy to send information to your office. Seamlessly. Privately. Accurately.

- Gather and send data to your office computer
- Link health, genetics and breeding records to EID
- Eliminate manual recording errors
- Control access to your information



Allflex CONNECT

Free and Available for IOS or Android



Tissue Sampling Products



Allflex – Tissue Sampling Technology

Collecting tissue samples has never been more efficient and cost effective. Scientific advancements in the mapping of livestock genomes along with continued development of affordable analytics has changed the sampling industry – making it easier and quicker for producers to use DNA for:

- Parentage verification
- Genetic selection
- BVD diagnostics

Fast, high performance sample collection ... Samples can be collected in seconds with minimal animal restraint. A single-squeeze motion collects a sample with minimum distress to the animal.

Clean, uncontaminated sampling ... The genetic material is sealed in a specially designed preservative.

Visual, DNA-sample identification ... Instant confirmation of on-farm sampling success. No more guessing whether enough genetic material has been gathered.

Minimize retesting ... Tissue samples contain a large quantity of high quality DNA for genetic analysis yielding excellent lab results.

Tissue Sampling Applicator

SKU: APP-TSU



TSU Tray

SKU: TSU-TRAY-B

TSU Tray + Lid

SKU: TSU-TRAY+LID



Tissue Sampling Unit-Box of 10

SKU: AF-TSU-10



Tissue Sampling Unit-Box of 100

SKU: AF-TSU-100



TSU Cap Sheet - Bag of 100

SKU: TSU-CAP-W

Tissue Sampling Products

TSU Matched Sets



**Tissue Sample Unit with Global
Maxi & Small Male**

SKU: TSU-GXF58/GSM-COLOR-SS



**Tissue Sample Unit with
HDX Tamperproof Maxi
Matched Set**

SKU: TSU-HDX-840/GTXF-COLOR-SET2



**Tissue Sampling Unit with HDX
Tamperproof Maxi & Large Male
Matched Set**

SKU: TSU-HDX840/GTXF1-GLM1-COLOR

**Tissue Sample Unit with HDX
ATag™ Cow Matched Set**

SKU: TSU-HDX840/ATAGX-COLOR-SET17



*More options available
Visit allflexusa.com*

Tissue Sampling Products

Making ID Easy

Allflex Matched Sets

Producers continue to use our visual tags, electronic tags and Tissue Sampling Units in combination.

We've developed some efficiencies in the numbering of these sets, in order to eliminate the need to "match" these devices at a later date.

Just apply the entire ID set to your animal and the management number, EID number and TSU are permanently connected for ease of record keeping. Download the file from our website to save or share the information with your herd management program, breed association or genomics lab.

Management numbers can be in sequence or totally custom to better match your herd needs.

Use for calves, replacement females, bull sale tags or whatever your need!



We help you bring it all together.

For Tag Lookup visit: <https://flexlink.allflexusa.com/Search/Atlas?reportID>

Allflex 2-in-1 Marking Pens

- One pen with two marking tips (fine and broad)
- Easy-to-hold and easy-to-use pump action
- Fade resistant black or white ink
- Specially formulated for use on Allflex Ear Tags



Allflex 2-in-1 Marking Pens

SKU: PEN



SKU: PEN-WHITE

TIPS FOR MARKING

1

Wipe tag surface clean with isopropyl (rubbing) alcohol.

2

Mark tag indoors in a well ventilated area at room temperature. Keep the internal valve partially open by applying slight, constant pressure on the tip.

3

Write numbers and letters slowly for heavy inking and durable marking. Insufficient ink will cause the markings to fade prematurely.

4

Mark at least two times, allowing for proper drying between markings for best results.

5

If possible, dry tags in a warm, sunny area as this enhances ink penetration. Allow mark to dry thoroughly before tagging animal.

Patented Laser-Ink Marking

- Laser-ink marking allows for greater visibility of management numbers in livestock applications
- The patented marking process is exclusive to Allflex
- The durable laser mark is guaranteed to last the life of the animal







Precision Instruments

Repeater Syringes



50MR2
(Adjustable dosage from 1ml to 5ml)
SKU: 50MR2


- 50MR2**
- Accurately delivers selected dose
 - Easy grip for high volume use
 - Barrel and needle attachment are fully autoclavable
 - Streamlined design with fewer replacement parts
 - Amber-colored barrel reduces UV sunlight exposure
 - Color Knob Pack available to differentiate between medications



50MR2 Replacement Barrel
SKU: 50MR2-B



SGNOZZLE/BARREL
Sheep & Goat Drench Barrel
SKU: 50MR SG NOZZLE/BARREL

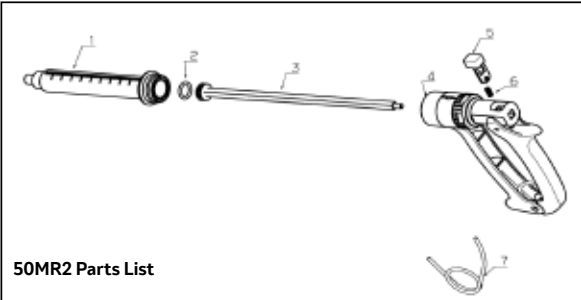

50MR2 Parts List

SKU	Item	Description
50MR2-PO	2	Piston O-Ring 50 ML
50MR2-B	1	Plastic Barrel 50 ML LL
50MR2-B/PO		Barrel & Piston O-Ring
50MR2-RH		Replacement Handle
50MR2-PR/R	3	Piston+Piston Rod 50 ML
50MR2-RH	4	Handle 50 ML CPL
MR2-LS	5	Locking Sleeve CPL
MR2-LSSP	6	Spring for Locking Sleeve
MR2-HS	7	Handle Spring
MR2-KNOB-K	8	Knob Black
MR2-KNOB-B	8	Knob Blue
MR2-KNOB-R	8	Knob Red
MR2-KNOB-Y	8	Knob Yellow
MR2-KNOB-PACK	8	Knob Pack

Precision Instruments



25MR2

(Adjustable dosage from .5ml to 2.5ml)

SKU: 25MR2

25MR2

- Accurately delivers selected dose
- Easy grip for high volume use
- Barrel and needle attachment are fully autoclavable
- Streamlined design with fewer replacement parts
- Amber-colored barrel reduces UV sunlight exposure
- Color Knob Pack available to differentiate between medications



25MR2 Replacement Barrel

SKU: 25MR2-B


ACCESSORIES

Color Code Injection Accuracy System

Interchangeable colored knobs let you dedicate a particular syringe to a selected vaccine or therapeutic compound to ensure proper administration and avoid mistakes.



(MUST BE ORDERED SEPARATELY)

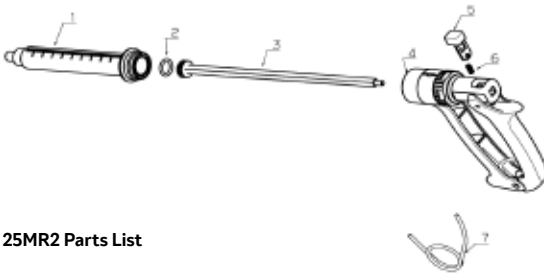

25MR2 Parts List

SKU	Item	Description
25MR2-PO	2	Piston O-Ring 25 ML
25MR2-B	1	Plastic Barrel 25 ML
25MR2-B/PO		Barrel & Piston O-Ring
25MR2-RH		Replacement Handle
25MR2-PR/R	3	Piston+Piston Rod 25 ML
25MR2-RH	4	Handle 25 ML CPL
MR2-LS	5	Locking Sleeve CPL
MR2-LSSP	6	Spring for Locking Sleeve
MR2-HS	7	Handle Spring
MR2-KNOB-K	8	Knob Black
MR2-KNOB-B	8	Knob Blue
MR2-KNOB-R	8	Knob Red
MR2-KNOB-Y	8	Knob Yellow
MR2-KNOB-PACK	8	Knob Pack

Precision Instruments

EM Syringes



2EM-B

(Adjustable dosage from .25ML to 2ML)

SKU: 2EM

5EM-B

(Adjustable dosage from .5ML to 5ML)

SKU: 5EM

2EM & 5EM Tube Fed Syringes

- Accurately delivers selected dose
- Easy V-grip for high volume use
- Metal Luer Lock Tip
- Removable barrel for cleaning
- Durable plastic design
- Amber-colored barrel and tubing reduce UV sunlight exposure

LD.3EM-BT

(Adjustable dosage from .1ML to .3ML)

SKU: LD.3EM-BT

2EM-BT


(Adjustable dosage from .25ML to 2ML)

SKU: 2EM-BT

5EM-BT

(Adjustable dosage from .5ML to 5ML)

SKU: 5EM-BT

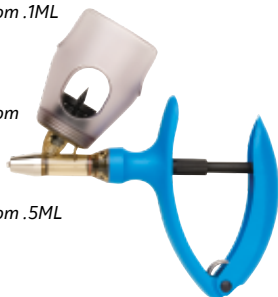

LD.3EM, 2EM & 5EM Bottle Fed Syringes

- Automatic self-filling with bottle attachment
- Heavy-Duty Bottle Cage for bottle protection (50ML & 100ML bottles only)
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Metal Luer Lock Tip
- Removable barrel for cleaning
- Durable plastic design
- Amber-colored barrel reduces UV sunlight exposure
- Plastic Atomizer Nozzle - SKU: 8300042687

2EM-BT-UBA


(Adjustable dosage from .25ML to 2ML)

SKU: 2EM-BT-UBA-GRAY

5EM-BT-UBA

(Adjustable dosage from .5ML to 5ML)

SKU: 5EM-BT-UBA-GRAY

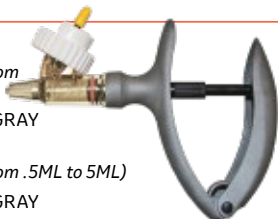

2EM & 5EM Bottle Fed Syringe with Universal Bottle Adapter

- Automatic self-filling with Universal Bottle Adapters
- Five color coded "Universal Bottle Adapters" included
- Universal Bottle Adapters enable multi-size bottles to fit on the syringe
- Metal Luer Lock Tip
- Removable barrel for cleaning
- Durable plastic design
- Amber-colored barrel reduce UV sunlight exposure

Universal Bottle Adapters



Measurements:

Blue: 250ml / 30mm
Black: Specialized 250/500ml / 34mm
White: 50ml / 100ml / 20mm
Red: 250ml / 30.5mm

SKU	Description	SKU	Description
2EM-B DRAW	2ML AUTOMATIC REUSABLE SYRINGE w/30MM	5EM-B	5ML AUTOMATIC REUSABLE SYRINGE w/30MM DRAW
2EM-S SPIKE	2ML AUTOMATIC REUSABLE SYRINGE w/PLASTIC	5EM-S	5ML AUTOMATIC REUSABLE SYRINGE w/PLASTIC SPIKE
EM.3ORING	PISTON O-RING 0.3 ML	EM1ORING	PISTON O-RING 1 ML
EM.5ORING	PISTON O-RING 0.5 M	EM2ORING	PISTON O-RING 2 ML
		EM5ORING	PISTON O-RING 5 ML

Precision Instruments

UM Syringes

1UM-T

(Adjustable dosage from
.1ML to 1ML)
SKU: 1UM-T



2UM-T

(Adjustable dosage from
.1ML to 2ML)
SKU: 2UM-T

2UM Tube Fed Syringe

- Automatic self-filling tube feed
- Adaptable to bottle feed
- Accurately delivers selected dose
- Ergonomic grip for comfort
- Steel Plunger (no O-ring) with precision glass barrel
- Adjustable pin-lock handle design



2UM

(Adjustable dosage
from .1ML to 2ML)
SKU: 2UM

2UM Bottle Fed Syringes

- Heavy-Duty Bottle Cage for bottle protection (50ML or 100ML bottles only)
- Adaptable to tube feed
- Accurately delivers selected dose
- Easy grip for high volume use
- Steel Plunger (no O-ring) with precision glass barrel
- Adjustable pin-lock handle design




5UM-T

(Adjustable dosage
from .5ML to 5ML)
SKU: 5UM-T

5UM-T Automatic Syringe

- 5ML automatic self-filling syringe
- Tube feed syringe
- Steel Plunger (no O-ring) with precision glass barrel
- Adjustable pin-lock handle design for easy conversion

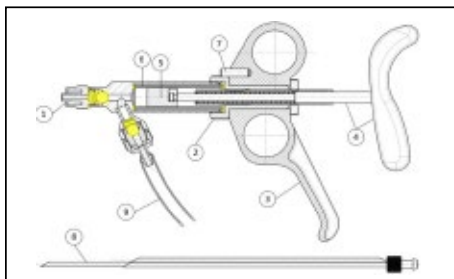

SKU			Item	Description
1UM-B	2UM-B	5UM-B		Glass Barrel 1ML/2ML/5ML
1UM-MSK	2UM-MSK	5UM-MSK		Major Service Kit
1UM-SK	2UM-SK	5UM-SK		Minor Service Kit
		5UM-BT		
		5UM/T-3		
XP14	XP14	XP14	1	Nozzle Luer-Lock
XP01	XP01	XP01	2	Washer
XP02	XP02	XP02	3	Compressing Spring
XP03	XP03	XP03	4	Metal Ball
1UM04	2UM04	5UM04	5	Barrel Sleeve
XP04	XP04	XP04	6	Sleeve
XP05	XP05	XP05	7	Handle Black
XP06	XP06	XP06	8	Piston Rod w. Handle
1UM08	2UM08	5UM08	9	Piston
XP10	XP10	XP10	10	Adjusting Sleeve
1UM10	2UM10	5UM10	11	Washer
XP08	XP08	XP08	12	Compressing Spring
XP09	XP09	XP09	13	Washer
XP11	XP11	XP11	14	Compressing Ring
XP12	XP12	XP12	15	Knurled Screw
1UM-B	2UM-B	5UM-B	16	Glass Barrel 1ML
XP13	XP13	XP13	17	Washer
XP-BATT	XP-BATT	XP-BATT	18	Bottle Attachment w/o Basket
XP-CAGE	XP-CAGE	XP-CAGE	19	Basket
XP17	XP17	XP17	20	Valve Screw
XP16	XP16	XP16	21	Pin
1UM11	2UM11	5UM11	22	Washer


Draw-Off Injection Syringes

Draw-Off Syringes




5VM Draw-Off Injection Syringe

- Automatic self-filling tube feed
- Accurately delivers selected dose
- Easy grip for high volume use
- Piston and O-ring Plunger
- Amber-colored barrel and tubing reduce UV sunlight exposure

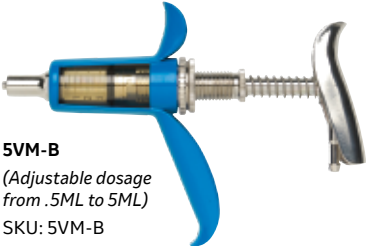

5VM-B
(Adjustable dosage
from .5ML to 5ML)
SKU: 5VM-B

SKU	Item	Description
5VM-A		5ML Automatic Syringe Tube Feed/20MM Draw Off
5VM-B		5ML Automatic Syringe Tube Feed/30MM Draw Off
XP20	1	Barrel Housing
5VM02	2	Mounting Hub
XP21	3	Plastic Barrel 5 CC
5VM03	4	Piston Rod
XP21-SPRING	5	Compression Spring
XP22	6	Dose Rod
XP23	7	Locking Nut
XP24	8	Barrel Lock Nut
5VM08	9	Piston
XP25	10	O-ring
XP26	11	Valve with Washer
XP02	12	Valve Spring
XP08	13	Valve Spring
5VM13	14	Front Luer Lock
XP27	22	Washer
AT18	24	PVC Amber Tube
5VM-SK	10(2ea),11(2ea),12,13	Minor Service Kit
5VM-MSK	3,10(2ea),11(2ea),12,13	Major Service Kit

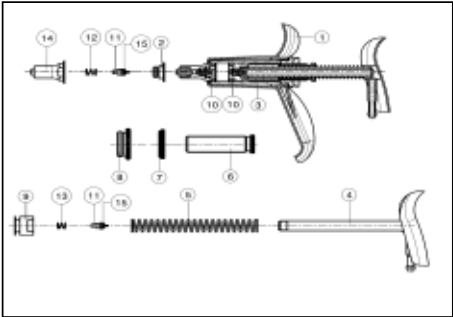

Draw-Off Injection Syringes



10VM

(Adjustable dosage from .5ML to 10ML)


SKU: 10VM-S



20VM

(Adjustable dosage from 1ML to 20ML)

SKU: 20VM-S

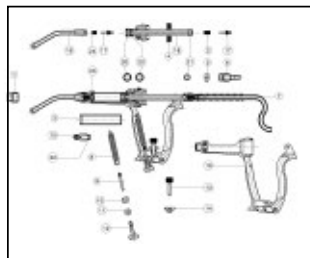

Drench Nozzles

5 1/2" Drench Nozzle for 10VM/20VM

SKU: **D-NOZ**

3" Drench Nozzle for 10VM/20VM

SKU: **S-NOZ**

10VM & 20VM Draw-Off Injection Syringes

- Automatic self-filling tube feed
- Designed to be used as an injector or drencher
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Easy to adjust handle tension for improved performance
- Durable metal and plastic design
- Double O-ring Piston
- Easy-to-clean external valves and removable piston shaft
- Amber-colored barrel and tubing reduce UV sunlight exposure

SKU		Item	Description
10VM-S-B	20VM-S-B		10ML & 20ML Automatic Syringe/30MM Draw Off
10VM-ORING	20VM-ORING	20	18 Piston O-ring (20ML)
10VM-HAN	20VM-HAN	19	Complete Handle Assembly
10VM-BAR	20VM-BAR	3	Amber Plastic Barrel
LLTIP	LLTIP	15	Luer Lock Nozzle
XP36	XP36	1	Nozzle Nut
XP37	XP37	5 & 17	Valve with O-ring
XP38	XP38	2 & 24	Valve Spring
10VM-ROD	20VM-ROD	18	7 Piston Rod 20ML
XP39	XP39	4	Retaining Nut
XP40	XP40	6	Tubing Attachment
AT-10VM	AT-20VM	7	PVC Tube length 1,7 m
XP41	XP41	8	Draw Spring
XP42	XP42	9	Spring Rod
XP43	XP43	14	Dosage Lock Nut
XP44	XP44	13	Dosage Screw
XP45	XP45	10	Tension Bushing
XP46	XP46	11	Tension Washer
XP47	XP47	12	Tension Screw
XP48	XP48	17	Lever Wear Pads (One-piece)
XP49	XP49	21	O-ring (Rear Valve Housing)
XP50	XP50	22	O-ring LL + Drench Nozzle
XP13	XP13	20	O-ring (Luer Lock Nozzle and Drench Nozzle)
10VM01	20VM01	23	O-ring (Barrel Mounting Hub)
10VM-SK	20VM-SK	5(2ea),6(2ea),17,18(2ea),19,20(2ea),21	Minor Service Kit Includes: Washer, Valve Spring, Ball (2ea.), Washer, Valve, Spring Washer, O-ring, Washer (Red)
10VM-MSK	20VM-MSK	2,5(2ea),6(2ea),17,18(2ea),19,20(2ea),21	Major Service Kit Includes: Washer, Valve Spring, Ball (2 ea.), Washer, Valve Spring, Washer, Washer, Glass Barrel (2ml), O-ring, Washer (Red)
BACK 25	BACK 25		2.5 Liter Back Pack
BACK 5L	BACK 5L		5 Liter Back Pack
D-NOZ	D-NOZ		5 1/2" Drench Nozzle
S-NOZ	S-NOZ	16	3" Drench Nozzle

Precision Instruments

Multi-Purpose Dosing Instruments

12.5ML, 30ML, 70ML Luer Tip Injector, 5.5" Drencher Nozzle, Pour On Tip

- Automatic self-filling syringe
- Easy set dial-a-dosage with easy view dosage window
- Tips included for Injector, Drencher and Pour On applications
- Removable barrel for cleaning
- Replaceable front valve and spring with lock-in-place feature
- Durable plastic design
- Easy V-grip for high volume use
- Amber colored barrel reduce UV sun light exposure

12.5EM-SDP

(Adjustable dosage from .5ML to 12.5ML)

SKU: 12.5EM-SDP



30EM-SDP

(Adjustable dosage from 5ML to 30ML)

SKU: 30EM-SDP



70EM-SDP

(Adjustable dosage from 7.5ML to 70ML)

SKU: 70EM-SDP



Nozzles



Drench Nozzle

5 1/2" Drench Nozzle for 10VM /20VM

SKU: D-NOZ

3" Drench Nozzle for 10VM/20VM

SKU: S-NOZ



Pour On Nozzle



Injector Tip

DF Masterline™ Syringe

Roux Revolver 50ML Syringe

- Proven Pistol Grip Design
- Durable Metal construction with a glass barrel
- High quality for long service life



SKU: 50ROUX-DF

Precision Instruments



Drenchers



10VM Drencher

(Adjustable dosage from .5ML to 10ML)

SKU: 10VM-D

20VM Drencher

(Adjustable dosage from 1ML to 20ML)

SKU: 20VM-D

10VM & 20VM Drenchers

- Automatic self-filling tube feed
- Designed to be used as an injector or drencher
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Easy-to-adjust handle tension for improved performance
- Durable metal and plastic design
- Double O-ring Piston
- Easy-to-clean external valves and removable piston shaft
- Amber-colored barrel and tubing reduce UV sunlight exposure

70ml Drencher

(Adjustable dosage from 10ML to 70ML)

SKU: UKAL-70ML

200ml Drencher

(Adjustable dosage from 10ML to 200ML)

SKU: UKAL-200ML

70ML & 200ML Drenchers

- Durable barrel with metal push rod and piston
- Dosage calibrations controlled by distal screw
- Easy-to-use grip



10ML Nylon Syringe

(Adjustable dosage from 1ML to 10ML)

SKU: TU MASTERLINE-10ML

20ML Nylon Syringe

(Adjustable dosage from 1ML to 20ML)

SKU: TU MASTERLINE-20ML

50ML Nylon Syringe

(Adjustable dosage from 5ML to 50ML)

SKU: TU MASTERLINE-50ML

10ML, 20ML & 50ML Nylon Syringes

- Durable clear Nylon construction with comfort handle
- Metal Luer Lock Tip and Plunger Shaft
- Visible barrel scale with dosage increments
- Fully boilable for disinfection
- Individually packaged including spare O-ring parts
- Available in 10ML, 20ML and 50ML

SKU

TU FLEX-MASTER A 10 ML LL
TU FLEX-MASTER A 20 ML LL
TU FLEX-MASTER A 50 ML LL
TU FLEX-MASTER B 10 ML LL
TU FLEX-MASTER B 20 ML LL
TU FLEX-MASTER B 50 ML LL


Description

TU MASTERLINE 10ML SYRINGE
TU MASTERLINE 20ML SYRINGE
TU MASTERLINE 50ML SYRINGE
TU MASTERLINE/DOSAGE LOCK 10ML SYRINGE
TU MASTERLINE/DOSAGE LOCK 20ML SYRINGE
TU MASTERLINE/DOSAGE LOCK 50ML SYRINGE



Precision Instruments

HSW ECO-MATIC® TWIN



The Market's First Lightweight, Ergonomic Compact Double Barrel Plastic Syringe

- Simultaneous vaccination of two products independently
- Premium quality plastic syringe with durable plastic barrels
- Reusable - The only plastic syringe that can be boiled
- Ergonomic, lightweight design for comfort and ease of use
- Bottle mount and/or tubing connection
- Adjustable barrel orientation for comfort and different bottle sizes



- Unique Patent Pending Needle Nut Swivel Design

Needle distance can be adapted to the age, size and species of the animal
Seven different distances:

20MM - 21.1MM - 22MM - 28MM - 32MM - 34.9MM - 36MM

- Four Fixed Dose Barrel combinations available:

Package Includes:

- Two Universal Bottle Collars (20mm & 30mm)
- Two Universal Spigot Draw-off Collars (4-6mm)
- Two soft PVC tubing

Allflex SKU	Allflex Description
1/1 EM-TWIN	1/1 EM TWIN Syringe With Accessory Pack
2/2 EM- TWIN	2/2 EM TWIN Syringe With Accessory Pack
1/2 EM-TWIN	1/2 EM TWIN Syringe With Accessory Pack
.5/2 EM-TWIN	.5/2 EM TWIN with Accessory Pack

SKU	Description
Twin-B-L-EM.5ML	Twin Barrel Left 0.5ML Universal
Twin-B-L-EM1ML	Twin Barrel Left 1ML Universal
Twin-B-L-EM2ML	Twin Barrel Left 2ML Universal
Twin-B-R-EM.5ML	Twin Barrel Right 0.5ML Universal
Twin-B-R-EM1ML	Twin Barrel Right 1ML Universal
Twin-B-R-EM2ML	Twin Barrel Right 2ML Universal
EM.5ORING	Piston O-ring 0.5ML
EM1ORING	Piston O-ring 1ML
EM2ORING	Piston O-ring 2ML
TWIN FRONT WASHER	Front Sealing Washer Stepped
TWIN FRONT LUER LOCK	Front Part II Hexagonal
TWIN SWIVEL NUT	Twin Swivel Nut

Precision Instruments

SG-Nozzle

SG-Nozzle threads into the Luer Lock Syringe to make a syringe into a drencher for sheep and goats

SKU: SG-NOZZLE



Back Pack

2.5 Liter Back Pack: SKU: BACK25

5 Liter Back Pack: SKU: BACK5L

Back Pack comes with straps



Replacement Back Pack Cap

SKU: BACK-CAP



Draw-Off Color Coded Caps

20MM (white): SKU: HD20W

30MM (blue): SKU: HD30B



Extension Syringe

- Allows for increased distance to breeding animals and enhances user safety
- Long lasting strong and durable carbon-metal design
- Heavy metal luer needle lock
- Ergonomic and lightweight
- Optimized for use with Allflex Syringe Line



SKU: SYR-EXT29CM

Injection Bar for Swine

- Allows for increased distance to breeding animals and enhances user safety
- Reduce user exposure to crates and gating
- Time saving for mass vaccinations
- Long lasting strong and durable carbon-metal design
- Heavy metal luer needle lock
- Kink protection for tubing
- Ergonomic and lightweight
- Optimized for use with Allflex Syringe Line



SKU: SE17

Bottle Holders

- Constructed of premium quality Neoprene
- Hanging/Belt and Arm models available
- Designed to fit and protect medicine and vaccine bottles
- Prevents or reduces vaccine temperature fluctuations
- Protects glass bottle from outside impact
- Shields vaccine from harmful UV lights
- Easy and comfortable use
- Built in needle holders from convenience
- Three sizes available: Small, Medium and Large



SKU's:	HSW-BH-ARM SMALL	HSW-BH-BELT SMALL
	HSW-BH-ARM MEDIUM	HSW-BH-BELT MEDIUM
	HSW-BH-ARM LARGE	HSW-BH-BELT LARGE

Precision Instruments Accessories

CleanVax™

Clean, fast and convenient vaccinations with CleanVax nozzles and shields

CleanVax nozzles are designed to be minimally invasive, providing a more comfortable vaccination experience for calves. This also improves ease of administration, making the experience quick and easy for both you and your calves. The disposable shields provide a hygienic vaccination for every calf.

CleanVax Nozzles

Sold in packs of 10
SKU: CLEANVAX-NOZZLE



CleanVax Shields

Sold in packs of 25
SKU: CLEANVAX-SHIELDS



PRIMING A SYRINGE

Priming the syringe eliminates air from the system, assuring the proper dose is administered.

- 1 Position the dosage indicator to approximately half the capacity of the cylinder.
- 2 Pump the handle until the medication is expelled from the needle or nozzle in an unbroken stream. To avoid loss of medication during priming, insert sterile needle or nozzle into the neck of the container.


SYRINGE CLEANING & MAINTENANCE

Proper care can extend the life of your Allflex Syringe. After use, or when switching medications, the cylinder and feed tube should be thoroughly cleaned.

- 1 Add 4-5 CC of detergent to one quart of hot water. Note: When using modified live virus vaccines, use caution selecting detergent. Avoid antibacterial/disinfectant soap as it may harm the vaccine.
- 2 Set the dosage system on maximum and briskly pump the hot detergent solution through the medication reservoir, feed tube and instrument.
- 3 Rinse by pumping clean water through the reservoir, feed tube and instrument until water is expelled.
- 4 Pump dry and remove the tubing.
- 5 To maintain the O-rings and valves, periodically lubricate the syringe with a small amount of castor oil or vegetable oil. Note: Do not use mineral oil, silicone, WD40, glycerin or alcohol. Petroleum-based products harden the rubber rings and valves, reducing the life of the components.

USING A TUBE FED SYRINGE

To attach a medication reservoir:

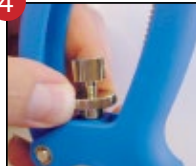- 1 
Attach one end of the amber tube to the syringe/drencher
- 2 
Option 1: Attach the other end of the amber tube to the selected draw-off cap
- 3 
Option 2: Attach the other end of the amber tube to the 2.5 liter back pack
- 4 
Loosen dose adjustment lock nut
- 5 
Turn dosing adjustment screw to set the required dosage. Retighten lock nut
- 6 
Handle spring pressure can be adjusted for comfort and tension

*** We no longer accept returns on products shipped to swine facilities as part of our biosecurity commitment.**

Recommended Tag Placement


Application site must be free of foreign debris prior to placement of tags on the animal. Review application instruction prior to tagging.

IMPORTANT: Caution, "Free Air Space" is critical for proper healing and retention. Inspect placement after tagging to ensure there is sufficient space between ear and EID tag.



FOR CATTLE


1. The EID tag should be placed in the middle of the ear between the two cartilage ribs close to the head.
2. The female portion of the tag should be on the inside of the ear with EID tag application. Note that this is a thicker part of the ear. Application may be more difficult than when applying a visual tag.

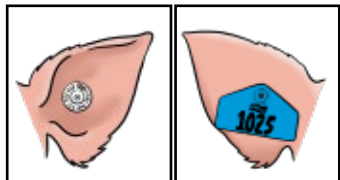

FOR SWINE

1. Place the EID tag in the middle or thicker part of the ear.
2. The male tag should be on the outside of the ear and the female (or EID tag) should be placed on the inside of the ear. Tag retention is improved when male tag lays flush against the back side of the ear.

IMPORTANT: Tag application may vary based on breed type and ear size.

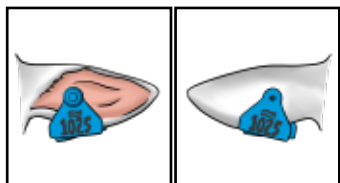

FOR SHEEP

1. Place the EID tag in between the cartilage ribs of the ear, near the first quarter of the ear (closest to the head).
2. The female portion of the tag should be placed on the inside of the ear.



Apply Allflex Electronic ID Tags with the UTT3S or Red Universal Total Tagger. Use the red blunt pin and remove the black insert from the base of the jaws.

Hooking the clip on a metal surface and pulling against it, is the best way to "pop" the clip out of the applicator.



Universal Total Tagger Black Insert

SKU: CLIP-UTT-K

SKU: CLIP-UTT-W

(White clip is for insecticide tags)



Tag Lookup Guide

Easy Steps Tag/TSU • Lookup User's Guide

Finding Your Tag/TSU Numbers

Step 1. Navigate to www.alflexusa.com and Find "Tag Lookup" at the top of the screen

➤ Tag Lookup

Step 3. You may also enter **Multiple Bag#s**. Hit <enter> between the bag#s or copy and paste a list from a text or Excel file

Step 4. Click on Lookup

Step 5. The numbers you entered will show **green** on the grid after you click on Lookup, as shown. You are now ready to download your numbers. You can expand the **green** rows and see details by clicking on the plus sign. Only rows selected in **green** will be downloaded.

	Bag#
+	1000029338
+	1000029349
+	1000029350
+	1000029361
+	1000029372
+	1000029383

Step 2. Locate the Master#, Pallet#, Case#, Bag# or Tag# on labels as shown and enter them individually

Easy Step Instructions

Enter Master#, Pallet#, Case#, Bag# or Tag# or enter multiple bag numbers.

Master#, Pallet#,
Case#, Bag# or Tag#

C1000228330

Multiple Bag #s

1004374780
1004374791
1004374805
1004374816
1004374827

Lookup

Bag(s) Not Found

Bag(s) Not Found are marked with an * in the list. You can fix the entry and re-submit by clicking Lookup and/or proceed with the selection



* = Bag(s) Not Found

Master#, Pallet#,
Case#, Bag# or Tag#

Multiple Bag #s

1000029338
1000029349
1000029359*
1000029361
1000029372

Lookup

Downloading Your Tag/TSU Numbers

Step 6.

Select the file type and format in which you would like your numbers to be saved.

CSV = Comma Separated Value
XLS = Excel Spreadsheet
XML = Web Document

Select File Type and
Format and Click
Download




The selected format contains:
Bag#, Eid#, Mgmt#, Reg#

Download


Step 7.

Click download and open or save to your computer

Internet Explorer:



Chrome:





Tagging Today. Tagging Tomorrow.



WWW.ALLFLEXUSA.COM

Allflex USA, LLC is the licensed user of the Allflex trademark.
Copyright © 2026 Merck & Co., Inc., Rahway, NJ, USA and its affiliates. All rights reserved.
US-*Allflex*-260700002

